

# CONTENTS

1. SAFETY INFORMATION.....	3
2. SAFETY INSTRUCTIONS.....	5
3. PRODUCT DESCRIPTION.....	7
4. ACCESSORIES.....	7
5. CONTROL PANEL.....	8
6. PROGRAMME TABLE.....	9
7. OPTIONS.....	10
8. SETTINGS.....	11
9. BEFORE FIRST USE.....	12
10. DAILY USE.....	12
11. HINTS AND TIPS.....	13
12. CARE AND CLEANING.....	13
13. TROUBLESHOOTING.....	14
14. TECHNICAL DATA.....	15
15. INSTALLATION.....	17
16. PRODUCT INFORMATION SHEET IN REFERENCE TO E.U. REGULATION 1369/2017.....	19

## WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

**Visit our website for:**



Get usage advice, brochures, trouble shooter, service information:

**[www.electrolux.com/webselfservice](http://www.electrolux.com/webselfservice)**



Register your product for better service:

**[www.registerelectrolux.com](http://www.registerelectrolux.com)**



Buy Accessories, Consumables and Original spare parts for your appliance:


**[www.electrolux.com/shop](http://www.electrolux.com/shop)**

## CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 **Warning / Caution-Safety information**

 **General information and tips**

 **Environmental information**

Subject to change without notice.

## 1. SAFETY INFORMATION

Before beginning the installation and use of this appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damages that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

### 1.1 Children and vulnerable people safety



**WARNING!**

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

## 1.2 General Safety

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions supplied with the accessory. Read it carefully before installation (refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- Ensure good air ventilation in the room where the appliance is installed to avoid the backflow of unwanted gases into the room from appliances burning gas or other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from any appliances burning gas or other fuels.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Do not exceed the maximum load of 7 kg (refer to the "Programme chart" chapter).
- Do not use the appliance if items have been soiled with industrial chemicals.

- Wipe away lint or packaging debris that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

## 2. SAFETY INSTRUCTIONS

### 2.1 Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature can be lower than 5°C or higher than 35°C.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always keep the appliance vertical when it is being moved.
- The rear surface of the appliance must be put against a wall.
- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.

## 2.2 Electrical connection



### **WARNING!**

Risk of fire and electric shock.

- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- This appliance complies with the E.E.C. Directives.

## 2.3 Use



### **WARNING!**

Risk of injury, electric shock, fire, burns or damage to the appliance.

- This appliance is for household use only.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- Only dry fabrics which are suitable for drying in a tumble dryer. Follow the instructions on the fabric label.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer.

- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door of the appliance.
- Do not dry dripping wet clothes in a tumble dryer.

## 2.4 Care and cleaning



### **WARNING!**

Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use any abrasive products, abrasive cleaning pads, solvents or metal objects.

## 2.5 Disposal

 


### **WARNING!**

Risk of injury or suffocation.

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).


### 3. PRODUCT DESCRIPTION

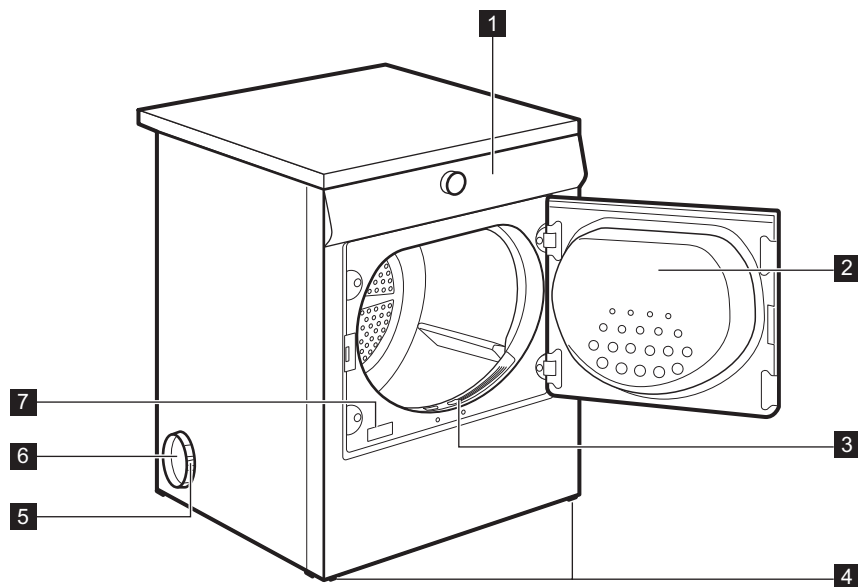

- |                                      |  |
|--------------------------------------|--|
| <b>1</b> Control panel               | <b>5</b> Plastic ring                  |
| <b>2</b> Appliance door (reversible) | <b>6</b> Side/rear ventilation opening |
| <b>3</b> Primary Filter              | <b>7</b> Rating plate                  |
| <b>4</b> Adjustable feet             |  |

### 4. ACCESSORIES

 
#### 4.1 Stacking kit

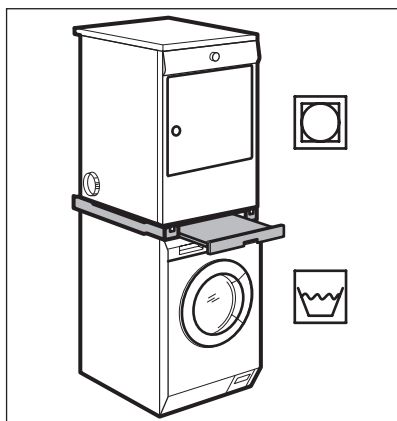

Available from your authorized dealer. Stacking kit can be used only with the washing machines specified in the leaflet. See leaflet attached. Read carefully the instructions supplied with the kit.

Product name: SKP11.

## 4.2 Pedestal with the drawer

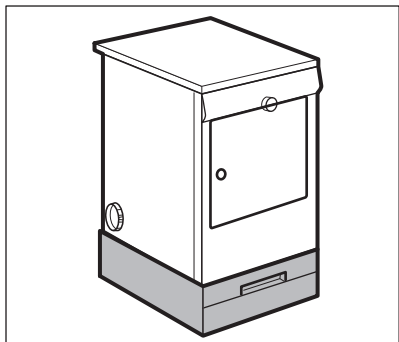 

Product name: PDSTP10.

Available from your authorized dealer. To put the appliance higher at the level

which helps to easy load and remove the laundry.


The drawer can be use for laundry storage e.g. : towels, cleaning products and more. Read carefully the instructions supplied with the accessory.

## 4.3 Vent kit

 Universal kit for vented dryers where an outdoor outlet is not possible. The tank collects lint and condensation, thus avoiding dirt and damage due to moisture in the room where the tumble dryer is placed.

Read carefully the instructions supplied with the kit.

# 5. CONTROL PANEL

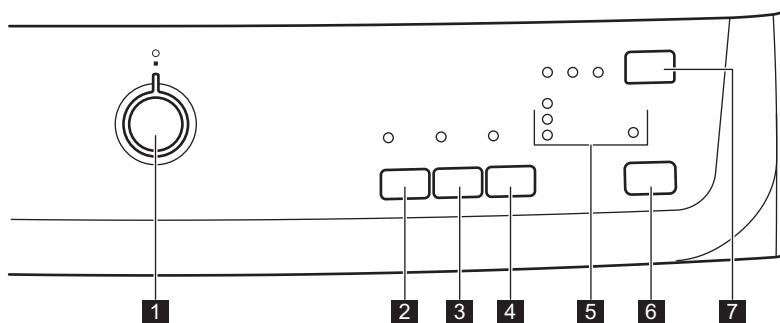








 






































- 1** Programme knob and OFF switch
- 2** Délicat button
- 3** Anti-Froissage button
- 4** Alarme button
- 5** Indicators: **Drying** (Séchage), **Cooling** (Refroidissement), **End/**


**Anticrease** (Anti-Froissage/Fin),  
Filtre

- 6** Départ/Pause button
- 7** Départ Différé button




## 6. PROGRAMME TABLE

Programmes	Type of load	Load (max.) <sup>1)</sup> / Fabric mark
 Coton		
 Très sec	Drying level: extra dry.	7kg/  
 Sec	Drying level: strong dry.	7kg/  
 Prêt à ranger <sup>2)3)</sup>	Drying level: cupboard dry.	7kg/  
 Légèrement humide	Drying level: textiles which are still to be ironed.	7kg/  
 Prêt à repasser <sup>3)</sup>	Drying level: suitable for ironing.	7kg/  
 Synthétiques		
 Très sec	Drying level: extra dry.	3kg/   
 Prêt à ranger <sup>3)</sup>	Drying level: cupboard dry.	3kg/   
 Prêt à repasser	Drying level: suitable for ironing.	3kg/   
<b>30'</b>	Time programme to dry individual items of laundry.	1kg/   
 Spécial		
 Textiles mélangés	Cotton and synthetic fabrics. Low temperature programme. Delicate programme with warm air.	3kg/   
 Facile à repasser	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to another. Shake the items before putting them in the appliance. When the programme has ended, immediately remove the items and put them on a hanger.	1kg (or 5 shirts)/   
 Jeans	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams).	7kg/   
 Rafraîchir Laine	Refreshing a wool fabrics. Wool items become soft and cosy. Remove the items immediately after the programme end.	1kg

Programmes	Type of load	Load (max.) <sup>1)</sup> / Fabric mark
 Refroidissement	Refreshing textiles that were in storage.	<b>1kg</b>


1) The maximum weight refers to dry items.

2) The  Coton Prêt à ranger ECO programme is the "Standard cotton programme" according to Commission Regulation EU No. 392/2012. It is suitable for drying normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

3) **For test institutes only:** Standard programmes for tests are specified in the EN 61121 document.

## 7. OPTIONS

### 7.1 Délicat

With this option you can set a delicate drying programme that has a low temperature. Use this option with a fabrics that have the symbol  on the fabric label (e.g. acrylic, viscose).

### 7.2 Anti-Froissage

Extends up to 90 minutes the anticrease phase (30 minutes) at the end of the drying cycle. After drying phase drum rotates time to time what prevents the mclothes from creases. Laundry can be removed during the anti-crease phase.

### 7.3 Alarme

you can hear the buzzer at the:











- cycle end
- start and end of crease guard phase
- cycle interruption

The buzzer function is by default always on. You can use this function to activate or deactivate the sound.



You can activate the Alarme option with all programmes.

 
### 7.4 Options table

Programmes <sup>1)</sup>	 Délicat	 Anti-Frois- sage	 Alarme
 Coton			
 Très sec	■	■	■
 Sec	■	■	■
 Prêt à ranger	■	■	■
 Légèrement hu- mide	■	■	■
 Prêt à repasser	■	■	■
 Synthétiques			

Programmes <sup>1)</sup>	✿ Délicat	📄 Anti-Froissage	🔊 Alarme
△ Très sec	■	■	■
📄 Prêt à ranger	■	■	■
📄 Prêt à repasser	■	■	■
30'	■	■	■
☆ Spécial			
📄 Textiles mélangés	■	■	■
📄 Facile à repasser	■	■	■
📄 Jeans	■	■	■
🌀 Rafraîchir Laine	■		■
🌿 Refroidissement			■

<sup>1)</sup> Together with the programme you can set 1 or more options. To activate or deactivate them, press the related touch button.

## 8. SETTINGS

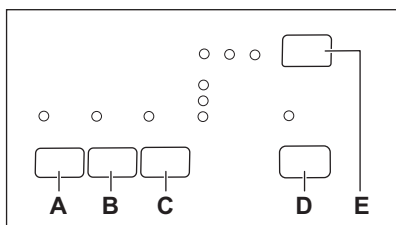

- A. ✿ Délicat button
- B. 📄 Anti-Froissage button
- C. 🔊 Alarme button
- D. ▶|| Départ/Pause button
- E. ⌚ Départ Différé button

### 8.1 Adjustment of the remaining laundry moisture degree

To change the default degree of the remaining moisture of the laundry:

1. Use the programme knob to set any programme.

2. Wait approximately 8 seconds.
3. Press and hold buttons (B) and (D) at the same time.

One of the these indicators comes on:

- **Anti-Froissage/Fin** - the maximum dry laundry
- **Refroidissement** - the more dry laundry
- **Anti-Froissage/Fin** and **Refroidissement** the standard dry laundry

4. Press the button (D) again and again until the indicator of the correct level comes on.
5. To confirm the adjustment, press and hold buttons (B) and (D) at the same time for approximately 2 seconds.

### 8.2 Buzzer permanent off

To deactivate or activate the acoustic signals, press and hold for approximately 2 seconds touchpads (A) and (B) at the same time.

## 9. BEFORE FIRST USE

Before you use the appliance for the first time:

- Clean the tumble dryer drum with a moist cloth.

- Start a 1 hour programme with moist laundry.

## 10. DAILY USE

### 10.1 Start a programme without delay start

1. Prepare the laundry and load the appliance.



#### CAUTION!

Make sure that when you close the door, the laundry does not get caught between the appliance door and the rubber seal.

2. Set the correct programme and options for the type of load.
3. Press the Départ/Pause touch button.

The programme starts.

### 10.2 Starting the programme with delay start

1. Set the correct programme and options for the type of load.
2. Press the delay start button again and again as necessary.



You can delay the start of a programme by 3, 6 or 9 hours.

3. Press the Départ/Pause button. The LEDs (9H, 6H, 3H) change on each 3 hours.

### 10.3 Change a programme

1. Turn the Programme knob to OFF
2. Set the programme.

### 10.4 At the end of the programme

When the programme is completed:

- An intermittent acoustic signal operates.

- The indicators **End/Anticrease** (Anti-Froissage/Fin) , comes on.
- The Départ/Pause indicator is on. The appliance continues to operate with the crease guard phase for approximately other 30 minutes.

The crease guard phase removes creases from your laundry.

You can remove the laundry before the crease guard phase is completed. We recommend, for better results, that you remove the laundry when the phase is almost completed or completed.

When the crease guard phase is completed:

- The indicators **End/Anticrease** Anti-Froissage/Fin , Filtre comes on.
- Départ/Pause indicator goes off.

1. Turn the Programme knob to OFF
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.



**Always clean the filter and empty the water container when a programme is completed.**


### 10.5 Stand-by function

To decrease the energy consumption, this function automatically deactivates the appliance:

- After 5 minutes if you do not start the programme.
- After 5 minutes from the end of the programme.

### 10.6 Indicator lights





These lights indicate the following functions:

- **Drying** (Séchage) : This light indicates that the appliance is in the drying phase.
- **Cooling** (Refroidissement): This light indicates that the appliance is in the cooling phase.
- **End/Anticrease** (Anti-Froissage/Fin) : This light indicates that the appliance is in the anticreasing phase and at the end of the programme.
- **Filtre** : This light illuminates at the end of the programme to remind you that the filters must be cleaned.

## 11. HINTS AND TIPS

### 11.1 Preparing the laundry

- Close the zips.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from pockets.
- Turn items with the internal layer made of cotton inside out. Cotton layer must be faced outwards.
- Always set the programme suitable for the type of laundry.
- Do not put light and dark colours together.
- Use suitable programme for cottons, jersey and knitwear to reduce shrinkage.
- Do not exceed the maximum load stated in the programmes chapter or shown on the display.
- Dry only the laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.

Fabric label	Description
	Laundry is suitable for tumble drying.
	Laundry is suitable for tumble drying at higher temperatures.
	Laundry is suitable for tumble drying at low temperatures only.
	Laundry is not suitable for tumble drying.

## 12. CARE AND CLEANING

 
### 12.1 Cleaning the filter

At the end of each cycle the filter indicator is on to tell you that the filter must be cleaned.




The filter collects the fluff. The fluff occurs while the cloths are dried in the tumble dryer.


1. Open the door.

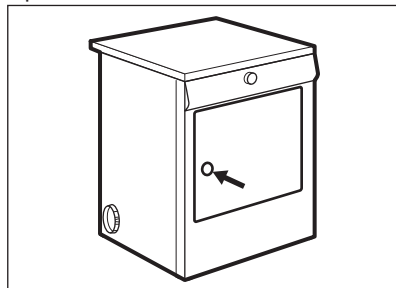

 
2. Pull the filter.

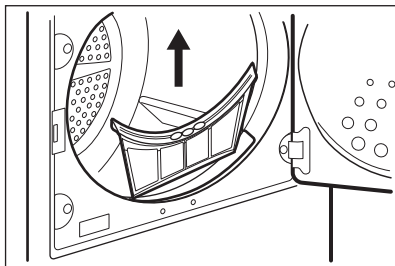

 3. Open the filter.

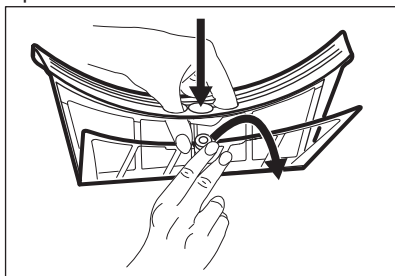

 4. Use a moist hand to clean the filter.

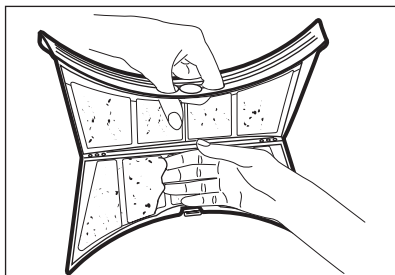

5. Close the filter.  
6. Remove fluff from the filter socket. For this a vacuum cleaner can be used.  
7. Put the filter inside the filter socket.

## 12.2 Cleaning the drum



### **WARNING!**

Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum lifters. Dry the cleaned surfaces with a soft cloth.



### **CAUTION!**

Do not use abrasive materials or steel wool to clean the drum.

## 12.3 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



### **CAUTION!**

Do not use furniture cleaning agents or cleaning agents which can cause corrosion.

# 13. TROUBLESHOOTING

Problem	Possible solution
You cannot activate the appliance.	Make sure that the mains plug is connected to the mains socket.
	Check fuse in fuse box (domestic installation).
The programme does not start.	Press Départ/Pause.
	Make sure that the appliance door is closed.

Problem	Possible solution
The appliance door does not close.	Make sure that the installation of the filter is correct.
	Make sure that the laundry does not catch between the appliance door and the rubber seal.
The display shows a long programme duration. <sup>1)</sup>	Make sure that the weight of the laundry is applicable to the duration of the programme.
	Make sure that the filter is clean.
	The laundry is too wet. Spin the laundry in the washing machine again.
	Make sure that the room temperature is not too warm.
The display shows a short programme duration.	Set the Minuterie or the Très sec programme.
The display shows <b>Err</b> <sup>2)</sup> .	If you want to set a new programme, deactivate and activate the appliance.
	Make sure that the options are applicable to the programme.
The display shows (e.g. <b>E51</b> ) <sup>2)</sup> .	Deactivate and activate the appliance. Start a new programme. If the problem occurs again, contact the Service.

<sup>1)</sup> After maximum 5 hours, the programme ends automatically

<sup>2)</sup> only dryers with the display.

#### If the drying results are not satisfactory

- The set programme was incorrect.
- The filter is clogged.
- There was too much laundry in the appliance.
- The drum is dirty.
- Incorrect setting of the conductivity sensor.
- The airflow slots are clogged.

## 14. TECHNICAL DATA

Height x Width x Depth	850 x 600 x 600 mm (maximal 630 mm)
Max. depth with the appliance door open	1090 mm
Max. width with the appliance door open	950 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	108 l
Maximum load volume	7 kg

Voltage	230 V
Frequency	50 Hz
Sound power level	66 dB
Total power	2600 W
Energy efficiency class	<b>C</b>
Energy consumption on the standard cotton programme with the full load. <sup>1)</sup>	<b>4,25 kWh</b>
Energy consumption on the standard cotton programme with the partial load. <sup>2)</sup>	<b>2,35 kWh</b>
Annual energy consumption <sup>3)</sup>	510,00 kWh
Left-on mode power absorption <sup>4)</sup>	0,90 W
Off mode power absorption <sup>4)</sup>	0,10 W
Type of use	Household
Allowed ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	<b>IPX4</b>

<sup>1)</sup> With reference to EN 61121. 7 kg of cotton centrifuged at 1000 rpm.

<sup>2)</sup> With reference to EN 61121. 3,5 kg of cotton centrifuged at 1000 rpm.

<sup>3)</sup> Energy consumption per year in kWh, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used (REGULATION (EU) No. 392/2012).

<sup>4)</sup> With reference to EN 61121.

The information given in the chart above is compliant with the EU Commission regulation 392/2012 implementing directive 2009/125/EC.

## 14.1 Consumption data

Programme	Spun at / residual humidity	Drying time <sup>1)</sup>	Energy consumption <sup>2)</sup>
Coton <b>Eco</b> 7 kg			
Prêt à ranger	1400 rpm / 50%	100 min.	3,70 kWh
	1000 rpm / 60%	115 min.	4,25 kWh
Prêt à repasser	1400 rpm / 50%	75 min.	2,55 kWh



Programme	Spun at / residual humidity	Drying time <sup>1)</sup>	Energy consumption <sup>2)</sup>
	1000 rpm / 60%	87 min.	3,20 kWh
Coton <b>Eco</b> 3,5 kg			
Prêt à ranger	1400 rpm / 50%	61 min.	2,05 kWh
	1000 rpm / 60%	70 min.	2,35 kWh
Synthétiques 3 kg			
Prêt à ranger	1200 rpm / 40%	40 min.	1,20 kWh
	800 rpm / 50%	46 min.	1,47 kWh

1) For partial loads, the cycle time is shorter and appliance uses less energy.

2) Improper ambient temperature and/or poorly centrifuged laundry can prolong cycle time and increase the energy consumption.

## 15. INSTALLATION

 
### 15.1 Unpacking




#### CAUTION!

Before use all parts of the transport packaging must be removed.


1. Open loading door.

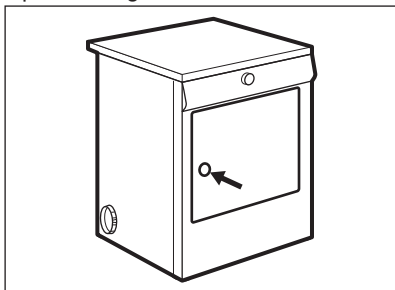

 2. Pull off adhesive strips from inside machine on top of drum.

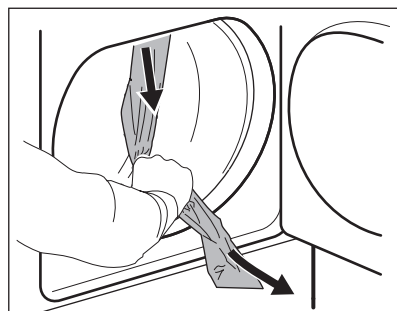

 3. Remove foil hose and polystyrene padding from the machine.

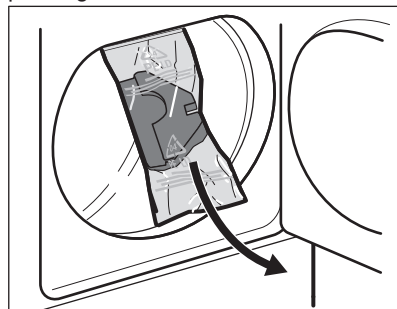

## 15.2 Vent hose



As to the outlet itself, if you have decided on a install wall/window grille, a good local builder's merchant can supply you with the necessary fittings and installation advice.

 


Make sure that the vent hose length is less than 2 m, and that it contains no more than 2 bends.



### WARNING!

It is important not to connect the vent hose to, for example, a cooker hood, or a chimney or flue pipe designed to transmit the exhaust from a fuel burning appliance.

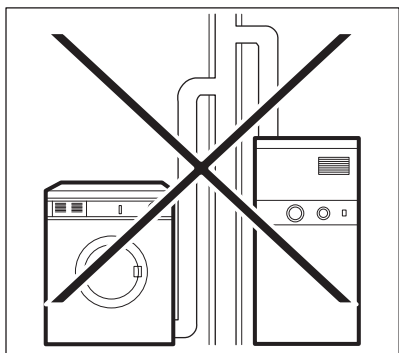


Note that to prevent condensation problems, it is essential that the dryer be installed with the flexible hose to transmit its "exhaust" at least beyond the kitchen units; preferable outside the kitchen. In order to prevent the appliance from overheating, it is important that the steam exhaust is unobstructed. Thus, if a permanent hose installed to an external wall or ceiling, it must be ensured an exhaust capacity of minimum 150 m<sup>3</sup>/h. If the dryer is installed adjacent to kitchen units, make sure that the vent hose is not squashed. If the hose is not fully squashed, drying efficiency will be decreased, resulting in longer drying times and higher energy consumption. If

the hose is fully squashed, the automatic cut-outs with which the appliance is fitted can operate. When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it can affect the performance of the appliance.



 If the hose is long and the room temperature low, the moisture might condense to water inside the hose. This is an usual occurrence. To prevent this water from the hose, it is recommend to drill a small hole (via. 3 mm) in the lowest point of the hose and to put a small container below it. (See picture, point B).

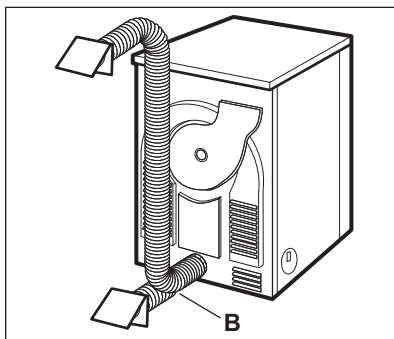


## Installation




There are 3 vent outlets: on the left, right side and at the rear.

 1. Pull the ring nut **A** from the vent outlet at the rear.

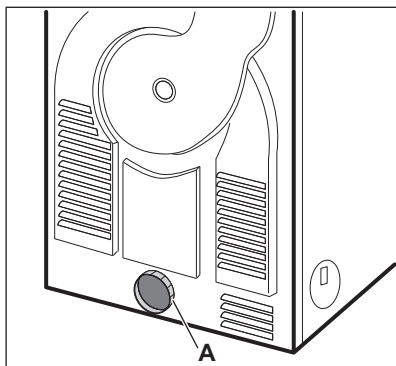

 2. Screw on the ring nut to the hose and push it into position.

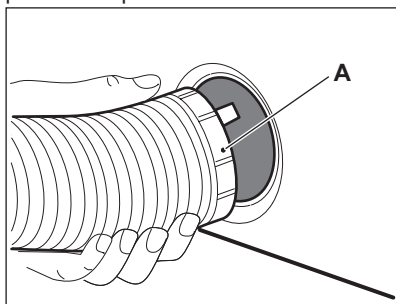

3. The not used vents must be sealed with supplied covers.

### 15.3 Door Reversal

To make it easier to load or unload the laundry, the door can be reversed. The door must only be reversed by an authorised service engineer. Please contact the Authorised Service Centre. The engineer will carry out the door reversal at your cost.


## 16. PRODUCT INFORMATION SHEET IN REFERENCE TO E.U. REGULATION 1369/2017

Product Information Sheet	
Trade Mark	Electrolux
Model	EDE1072PDW, PNC916095304
Rated capacity in kg	7
Air vented or condenser tumble dryer	Air-vented
Energy efficiency class	C
Energy consumption in kWh per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.	510,00
Automatic tumble drier or non-automatic tumble drier	Automatic

Energy consumption of the standard cotton programme at full load in kWh	4,25
Energy consumption of the standard cotton programme at partial load in kWh	2,35
Power consumption of the off-mode in W	0,90
Power consumption in left-on mode in W	0,10
Duration of the left on mode in minutes	10
The 'standard cotton programme' used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, this programme is suitable for drying normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for cotton.	
Weighted programme time of the 'standard cotton programme at full and partial load' in minutes	89
Programme time of the 'standard cotton programme at full load' in minutes	115
Programme time of the 'standard cotton programme at partial load' in minutes	70
Condensation efficiency class on a scale from G (least efficient) to A (most efficient)	-
Average condensation efficiency of the standard cotton programme at full load as a percentage	-
Average condensation efficiency of the standard cotton programme at partial load as a percentage	-
Weighted condensation efficiency for the 'standard cotton programme at full and partial load'	-
Sound power level in dB	66
Built in appliance Y/N	No

The information given in the chart above is compliant with the EU Commission regulation 392/2012 implementing directive 2009/125/EC.

## 17. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol .  
Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.







[www.electrolux.com/shop](http://www.electrolux.com/shop)



136954332-A-172019

